



Quick Reference Guide



WaveRunner® Xi-A and MXi-A Oscilloscopes

To get started quickly, take a few moments to read through this guide.

Additional information can be found in the Getting Started Manual.

On-line help also contains more information on using the instrument.

User Interface

Local Language

Local Language User Interface

WaveRunner can be set to display software menus in many different languages. You can select your language preference at startup by touching the icon in the upper right corner of the screen. This will take you to the language preferences selection.

Language Preference


Select a language from the pop-up menu. Once selected, you do not need to reboot your oscilloscope, but you may have to wait a short time for all translated items to load from the database.



Touch Screen with Stylus

Touch Screen with Built-in Stylus Holder

Just pull the stylus out of the built-in holder and use it with the touch screen graphical user interface.

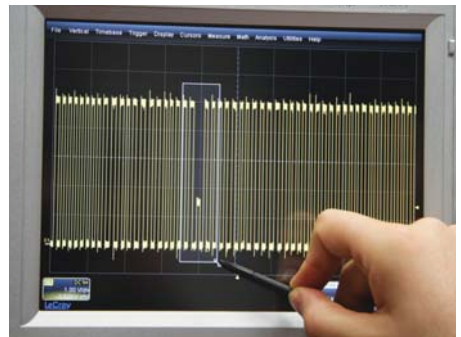

Understanding Display Information



Top Menu Bar

One way of accessing the setup menus.

Trigger Level Indicator

Color coded to the triggered signal.

Grid Area

Similar to many other oscilloscopes.

Descriptor Labels

Touch sensitive. One is provided for each channel, zoom, math, or memory that is on. Touch for quick access to the setup menu.

Trigger Position Indicator

Color coded to the triggered signal. Zero is center of display.

Timebase and Trigger Descriptor Labels

Touch sensitive. These are always displayed, and provide information on status. Touch for quick access to the setup menu.

 
Pre-Processing Summary Listing

(summarizes changes from default states)



Horizontal Descriptor Label

Trigger Delay (Position)



Samples

Sample Rate

Sampling Mode

(blank when in real-time mode)

Coupling

Gain Setting

Offset

Averaging Sweeps Count

Channel Abbreviation

Shortcuts

Shortcuts to Channel, Math, and Memory Menus

are provided to make it easy to access common functions. Touch the descriptor box to display the menu.



Channel
Descriptor Box



Zoom
Descriptor Box



Math
Descriptor Box



Memory
Descriptor Box

Toolbar Shortcuts to Channel, Math, and Memory Menus

These shortcuts are available from the channel, zoom, math, and memory menus. They can save you valuable setup time by predefining sources; and they provide additional features (such as labeling of traces).



 
Opens a Measurement selection pop-up menu. You can then select up to 6 parameters (measurements) for the active channel from this menu without leaving the Channel Setup menu.



Creates a zoom trace of the channel signal. The zoom trace becomes active, and you can use the Math and Zoom controls to modify its scale and position.



Opens a Math selection pop-up menu. You can then select a math function for the active channel from this menu without leaving the Channel Setup menu.



Copies the channel trace into its corresponding Memory (Reference Waveform) location. For instance, C1 is loaded into M1, C2 is loaded into M2, etc.



Automatically performs a vertical scaling that fits the waveform into the grid.



Opens a Labeling pop-up menu that allows user-defined labels tied to the waveform.

WaveStream™ Fast Viewing Mode

Overview


WaveRunner contains WaveStream™ technology that closely simulates the look and feel of a lively, analog display by providing a fast display update rate. You may adjust the intensity of the trace(s), and sample at the full scope sampling rate while in WaveStream mode, which significantly enhances glitch finding capability.

Press Knob

to toggle at any time between real-time sampling and WaveStream fast viewing mode.

Turn Knob

to adjust intensity in either WaveStream fast viewing mode or real-time sampling mode.

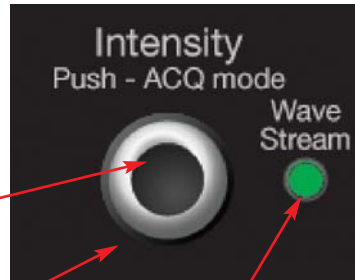

WaveStream Indicator Light

is lighted when WaveStream fast viewing mode is ON.

Math and Measure in WaveStream Mode

WaveStream traces comprise many overlaid traces. While in WaveStream mode, math and measurements are applied only to the last trace in the WaveStream acquisition. A math trace will not have the same appearance as a channel does in WaveStream mode, and measurements will accumulate more slowly compared to real-time sampling mode.

Zooming in WaveStream Mode

WaveStream data is pixilated data with 256 different intensity levels. If you zoom a WaveStream trace, you will zoom pixilated data. Therefore, it is recommended that you toggle to real-time sampling mode for most zooming.

Horizontal and Vertical Controls

Light OFF

Channel may or may not be displayed. Vertical controls will not adjust that channel (channel is "inactive").

Press Knob

to toggle between zero trigger delay and new setting.



Light ON

Indicates that the vertical controls will adjust that channel (channel is "active").

Press Knob

to toggle between zero offset and new setting.

Vertical Controls are always "active" for one of the Channels. The coloring on the descriptor labels indicates "active." Note that only one channel can be active at a time. If a channel is active, then its corresponding descriptor box is colored. If it is inactive, then its descriptor box is gray colored.



Inactive


Vertical controls will not work for this



Active

Vertical controls will work for this

Zoom and Math Controls

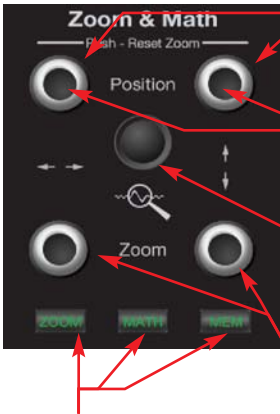

Turn Knobs
to adjust horizontal or vertical zoom position.

Press Knob
to reset horizontal or vertical zoom position and ratio.

Quick Zoom
press to zoom all channels on the display, and press again to unzoom.

Indicator Lights

help you understand if the Zoom and Math controls are "active" for a zoom, a math trace, or a memory trace.

Turn Knob
to change horizontal or vertical zoom ratio. Change adjustment from 1:2:5 steps to variable (or variable to 1:2:5 steps) in the zoom right-hand menu.

If all Indicator Lights are Off

then there are no zoom, math, or memory traces turned ON, and the knobs provide no functionality. Once a zoom, math, or memory trace is turned ON, then the knobs will provide adjustment of horizontal and vertical position and zoom for the active trace. A zoom, math, or memory trace is active when its corresponding descriptor box is colored. If it is inactive, then its descriptor box is gray colored.

Inactive

Zoom and Math controls will not work for these:




Active

Zoom and Math controls will work for these:





Trigger Control

Sets the trigger level — push to set to 50%. Is lighted when the trigger is armed. Is lighted and stays lit after a trigger. Press to open the trigger setup menu.

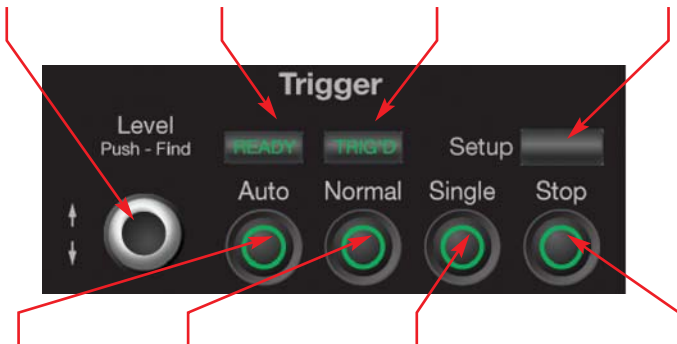

Triggers even if the trigger conditions are not met. Triggers whenever the trigger conditions are met. Triggers once (single-shot acquisition) when the trigger conditions are met. Cancels the acquisition in Auto, Normal, or Single trigger mode.

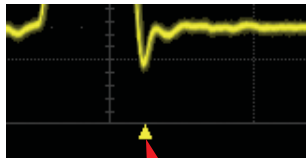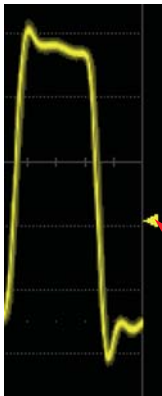


Post Trigger Indicator

Trigger Position Indicator

Trigger Level Indicator

Touch to access the trigger setup menu.

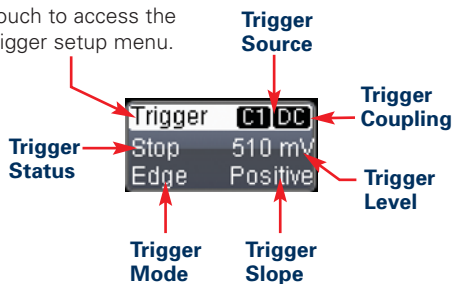

Using Cursors (and Multiplexed Adjust)

Dedicated cursor knobs on WaveRunner make using cursors easy. All common cursor features can be accessed from the front panel controls. There is no need to open menus to use cursors on WaveRunner.

Cursor Knobs

Rate sensitive knobs combine fine and coarse cursor positioning.

Upper Cursor Knob

Rotate to change cursor position of a single cursor, the leftmost vertical (time) cursor, or the top horizontal (amplitude) cursor. Push knob to reset cursor to default position.

Lower Cursor Knob

Rotate to change cursor position of a single cursor, the rightmost vertical (time) cursor, or the bottom horizontal (amplitude) cursor. Push knob to reset cursor to default position.



Cursor Type Button


Press to turn cursors ON, toggle through types, and turn cursors OFF.

Mode Indicator Lights

Light to indicate whether knobs are controlling cursor position or providing value adjustment.

Cursor Readout

Vertical (Y) information is located in the descriptor labels.

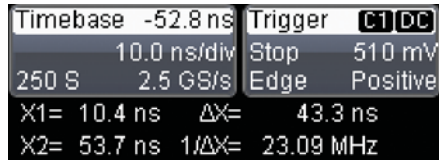

Horizontal (X) information is located underneath the Timebase and Trigger Descriptor Labels.

Multiplexed Adjust Capability




The cursor knobs also function as all-purpose “adjust” knobs to change values in menus. They are in the adjust mode when 1) a dialog box is open and 2) a value field is highlighted in yellow. Close the dialog box, and the knobs will revert to cursor mode.

Upper Adjust Knob

Always provides fine adjustment of the value highlighted in yellow.

Lower Adjust Knob

Always provides coarse adjustment of the value highlighted in yellow.


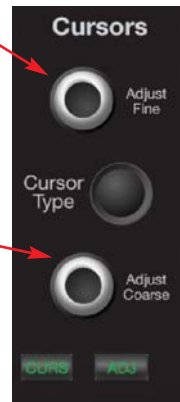


Setting Up Measurements

Viewing Statistics

Measure Setup

 Touch Measure in the top menu and then touch Measure Setup (or use the shortcut in the channel, math, or memory menu).

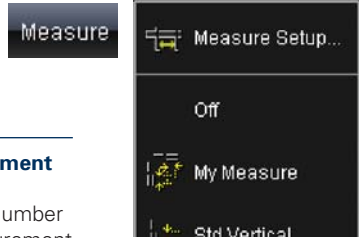

Choose Your Measurement and Source

Touch on a parameter number (Px) and select a measurement. Select the source in the Px tab, as required.

Help Markers

indicate how the measurement is being performed. Select a type and check if you want them to be "always on."



If Measurements Don't Appear

make sure that the Show Table checkbox is checked.

Measurement Display

Value

Last value measured in the acquisition.



 
Source

Status Indicator

Good measurement. (Refer to the manual for a complete listing of indicator icons).

Measurement (Parameter) Number

Measurement Name



Turn statistics on to see complete information

Measure	P1.ovsh+(C1)
value	2.1 %
mean	1.623 %
min	454 m%
max	3.0 %
sdev	422 m%
num	371
status	Good

Graphing and Viewing Parameters



View Statistics as Histicons

Simply check the box in the measure menu and a histicon will show you statistical distribution.

More Advanced Measurement Views

can be obtained with the use of Histograms, Tracks, and Trends. Setup is simple — just touch the icon to create the view. (Note: Track is an optional capability)




Zoom your Signals

There are three ways to zoom with the WaveRunner. Use whichever method feels best.



1 QuickZoom Button

Press the button and all channels displayed will be zoomed in separate grids. Will also UNDO any zooms.

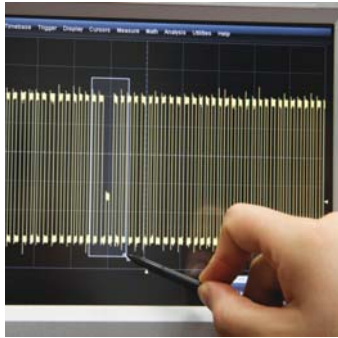

2 Draw a Zoom Box


Using the stylus, outline the area you wish to zoom.




3 Horizontal Adjust

Stop your acquisition, and use the delay and horizontal adjust knobs to position a subset of your acquisition.

Zoomed Area is Shown

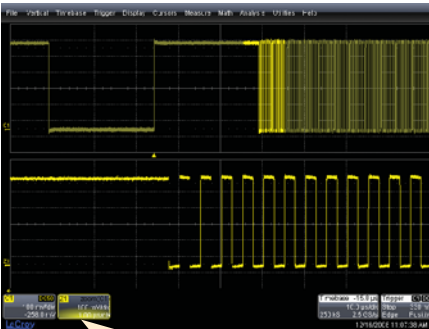

Zoom Descriptor Label shows zoom scaling.

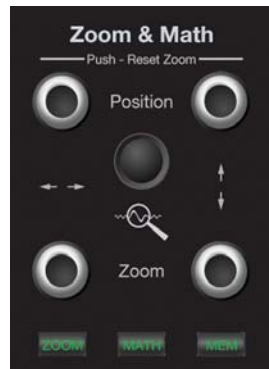


Use Zoom and Math Controls to adjust zoom scale and position (if desired).

Setting Up Math


Math Setup

 Touch Math in the top menu and then touch Math Setup.




Choose Your Math Function and Source

 in the math setup menu. Touch on a function number (Fx) and select a math function. Select the source in the Fx tab, as required.



Make Setup Adjustments

using the right-hand menu. Touch the Zoom tab and adjust zoom, or use the front panel Zoom & Math Controls to adjust position and scale.

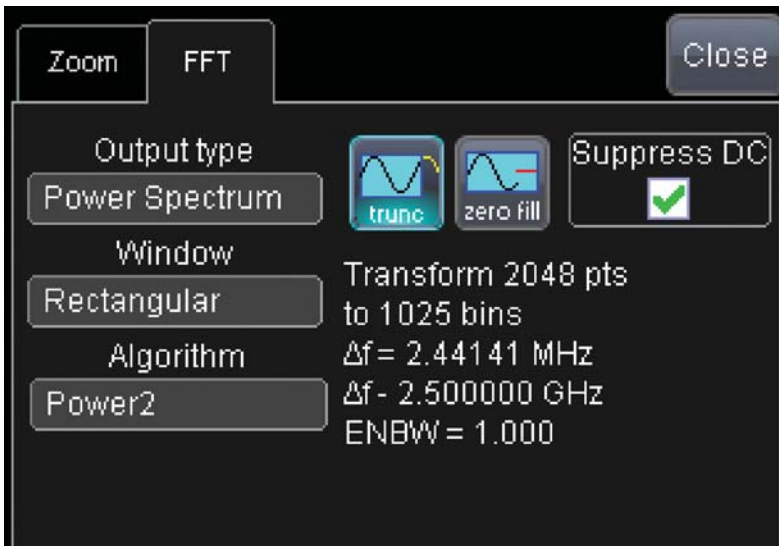

Setting Up Memories (Reference Waveforms)




1 Touch the **Descriptor Label** of the trace that you want to create a memory of (if it's not active, you'll have to touch it twice).



2 Touch the **Store Button** in the toolbar area of the channel setup menu.


Memory Trace Automatically Appears on the Grid.

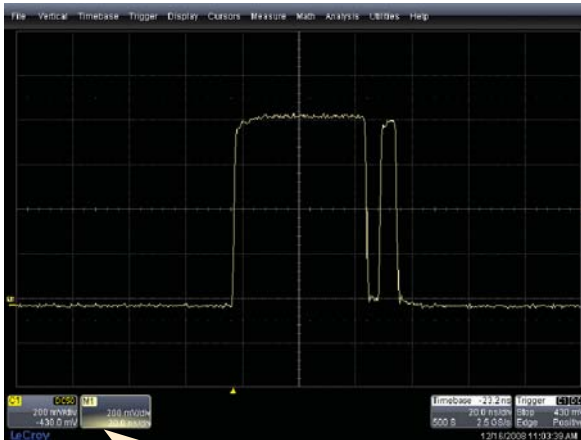

Memory Descriptor Label shows memory scaling.



Use Zoom and Math Controls to adjust memory scale and position (if desired).

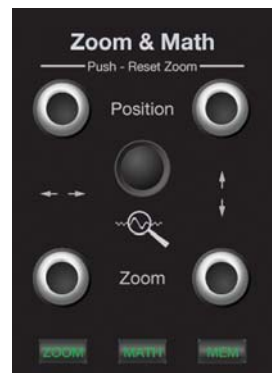

Integrated Analysis

WaveRunner has the best selection of optional software analysis tools and application packages. All of these tools are completely integrated into the scope to allow powerful analysis capability and easy, seamless operation.

Software Options

add capability into the existing Math and Measure menus. Reference the section on setting up Math and Measurements to learn how to access this capability. Here, you can see additional Histogram measurement capability added into the standard measurement selector pop-up menu.



Application Packages

such as MS-250/500 (Mixed Signal Option), PMA2 (Power Measure Analysis), and Serial Trigger & Decode (I²C, SPI, UART-RS232, CAN, LIN, FlexRay™), have application specific user interfaces that are accessed from the Analysis pull-down menu or Vertical pull-down menu (for MS-250/500). Any additional math or measure capability they provide is also included in the standard math and measure pop-up menus.

Communicate and Document

WaveRunner makes it easy to store, transfer and print your files and images. Refer to the Getting Started Manual for complete details.

Saving Screen Images

You can save a screen image as a file, send it as an email, print it, or store it on the clipboard. Define in Utilities, Utilities Setup, Hardcopy Menu.



Print Button

Can be defined to perform any of the above functions with one button push.





LabNotebook™

Saving Work and Documenting Results

The WaveRunner LabNotebook feature simplifies the way important waveforms, screen captures, and oscilloscope setup files are saved and documented. LabNotebook also provides an easy way to recall your settings with the Flashback feature. And it lets you create reports, showing your screen images, in pdf, html, or rtf output formats.

Creating a LabNotebook Entry

LabNotebook entries are easily created by selecting LabNotebook from the File menu, then clicking the Create button. Several annotation tools and colors then are put at your disposal to mark up your waveform. When you click Done, your mark-ups and scope settings are saved together in a database resident on the scope.

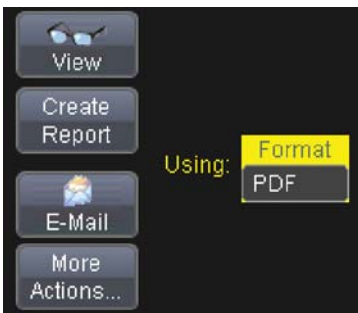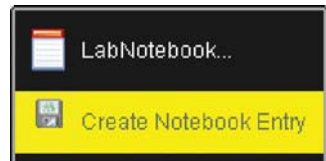

Click the Create Report button to generate a hardcopy format that you can save to a network drive or external media. Or click the E-mail button to send the report to another location. Use the Flashback feature at any time to recall a Notebook entry, including scope setup, for further study.

Thank You for Purchasing a WaveRunner Oscilloscope.

To offer comments or suggestions about the product,
please feel free to email the Product Manager at
WaveRunnerXi@lecroy.com

The LeCroy logo features the word "LeCroy" in a bold, blue, sans-serif font. The letter "L" is significantly larger than the other letters and has a horizontal bar extending to the left. The "C" is also large and has a horizontal bar extending to the right. The "o" and "y" are smaller and positioned between the bars of the "L" and "C".

**Corporate Headquarters
700 Chestnut Ridge Road
Chestnut Ridge, NY 10977
USA**

www.lecroy.com